


Mcfk – saddle

Thank you very much for buying our products. Please read the instructions carefully and follow the installation details. Have your Mcfk product assembled exclusively by a specialized dealer and present this manual to him for guidance. Please note that the manual is part of the product and as such should be kept safely.

Intended use

The Mcfk seat is approved for up to 100 kg rider weight. It can be used with MTBs, road or cyclocross cycles. The seat must only be used together with a post suitable for clamping oval seat frames. Never use this seat for supporting your bicycle against a wall or other object.

Replace all parts without delay after a fall/accident or when they have been used improperly. Even if you cannot see any defects such as a crack, deformation or mechanical wear, we cannot warrant the safe use of such parts.

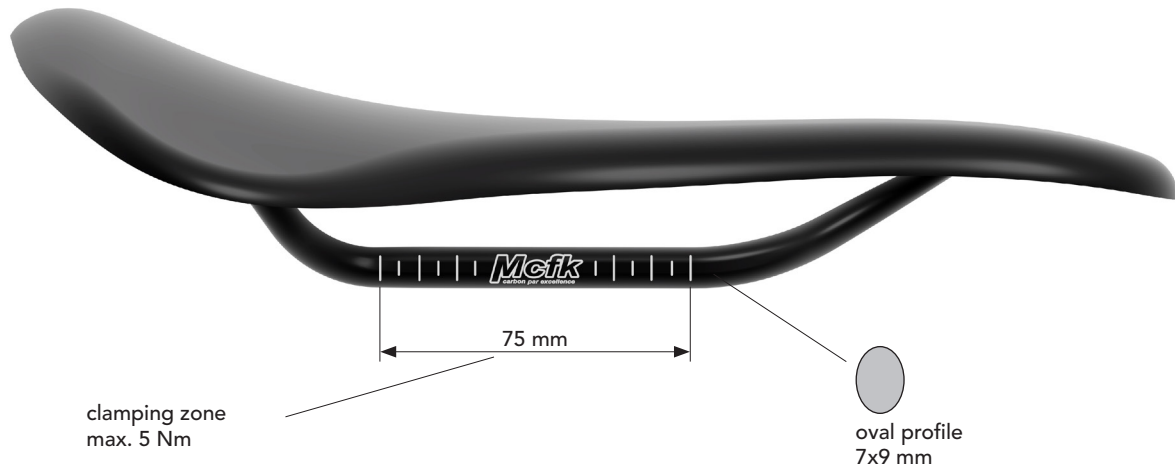

Seat installation (only for specialized dealers)

At first, make sure that the Mcfk seat is compatible with the seat post you want to clamp it to. The clamp should be usable with highly oval carbon seat frames. Be sure to read and observe the use instructions of the seat post manufacturer. Remove sharp edges, burrs and any contamination from the clamp, particularly the clamping surfaces. Rework these areas if necessary. All clamping surfaces should be free of dirt, dust and grease.

Tighten the seat stays maximum to 5 Nm tightening torque. Never clamp the stays outside the defined clamping range. If you ignore this instruction, the seat frame can be damaged and a high risk for the safety of the rider and others arise.

In use

Check the screws of the seat post clamp for proper torque regularly, have the tightening torque adjusted to the maximum permitted torque by a specialized dealer.

Observe the care instructions of seats with leather cover. Try to avoid extreme exposure of the leather to dirt or smudge. Keep seams clean. Wash the seat only with lukewarm water and wipe it with a cloth. Do not use chemical cleaner, or cleaning spray because these may damage the leather surface.

Warranty

We grant a warranty of two years from the purchase date of our products. We are sure you appreciate that warranty can only be claimed if you present the invoice of the purchase of the parts and the invoice of the specialized dealer who installed them. Please return the defective product, together with a description of the defect, your contact data and the above documents to the seller.

The warranty covers defects of material and manufacture; it does not include damage due to normal wear and tear, improper use of non-compliance with the instructions of use. Warranty claims can only be raised against Mcfk. This warranty does not include Mcfk's liability for damages, in particular, for indirect damage as a consequence of accident, other indirect damage or consequential damage.